



# **JX 2360**



## **Outer box connections manual**

Release 1.0

This document is subject to modification without notice  
Please, if necessary, ask for new release at : [contact@flashelek.com](mailto:contact@flashelek.com)

Lamp connection

- L2 : Power
- L0 : Ground
- L1 : Trigger
- J : Safety switch
- J : Safety switch
- T : Earth

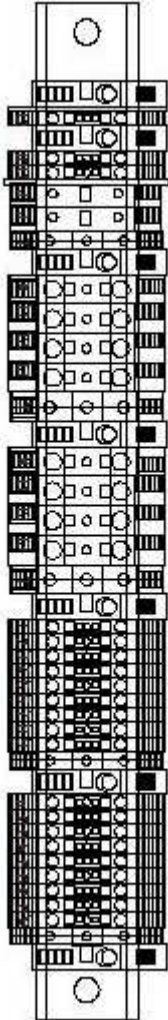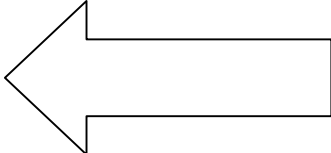

Mains connection



N : Neutral

L1 : Phase 1


L2 : Phase 2

L3 : Phase 3

T : Earth

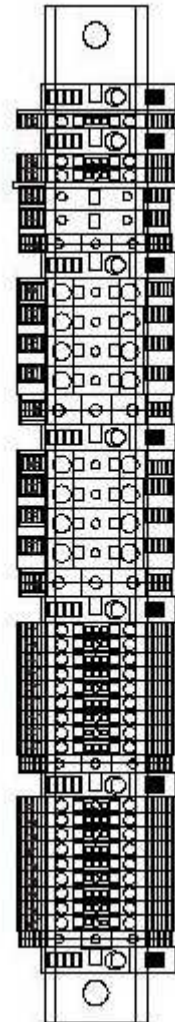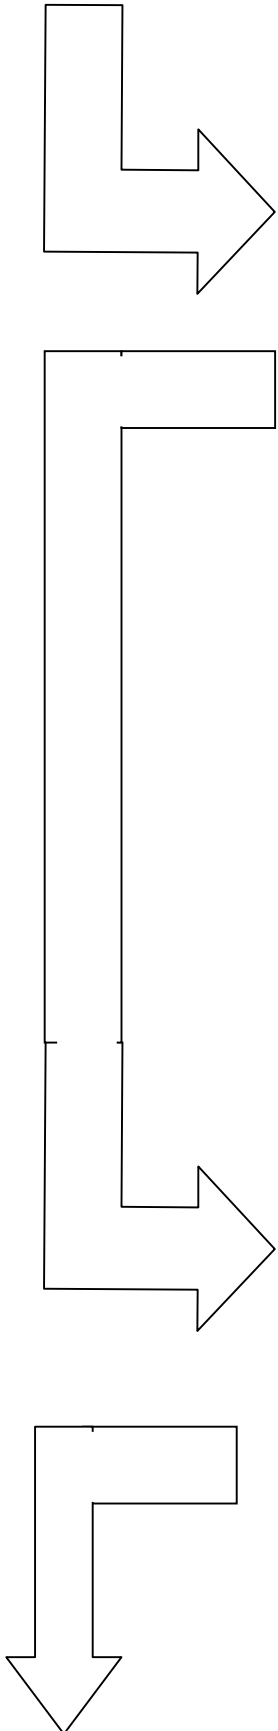

Box n°N

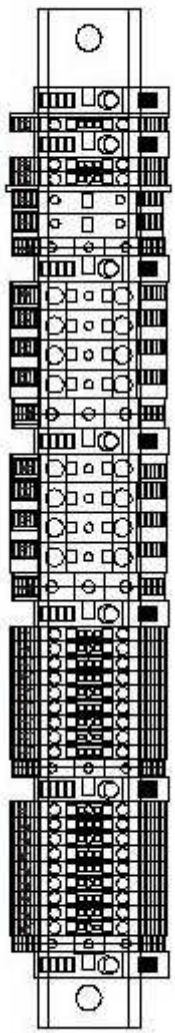

Box n°N + 1

5 and 15 = J-Bus A  
6 and 16 = J-Bus B  
2 and 12 = ground (shielding) J-Bus





7 and 17 = - Clock  
8 and 18 = + Clock

Remote control connection  
J-Bus mode


12, 15, 16,  
17, 18

to

2, 5, 6,  
7, 8

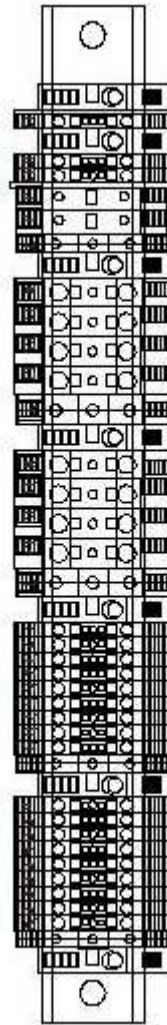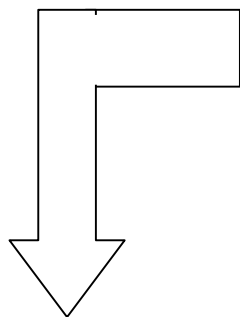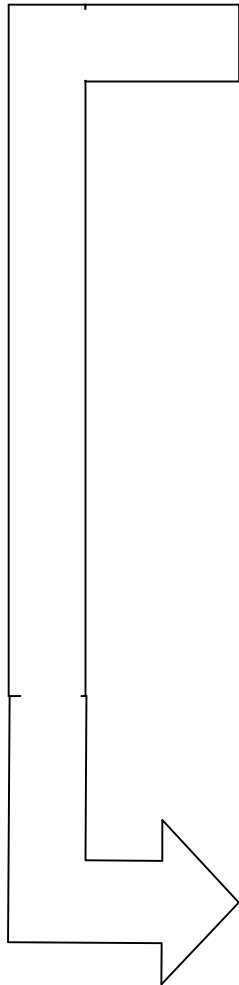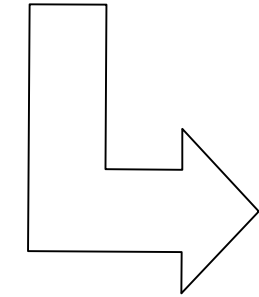

Box n°N

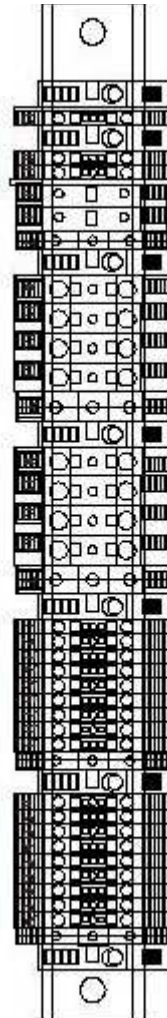

Box n°N + 1

1 and 11 = HI  
2 and 12 = Ground  
3 and 13 = MI  
4 and 14 = On/Off

7 and 17 = -Clock  
8 and 18 = + Clock

Remote control connection  
Analog mode


Box n°N

11,12,13,14,  
17, 18

to


1,2,3,4,  
7, 8

Box n°N + 1

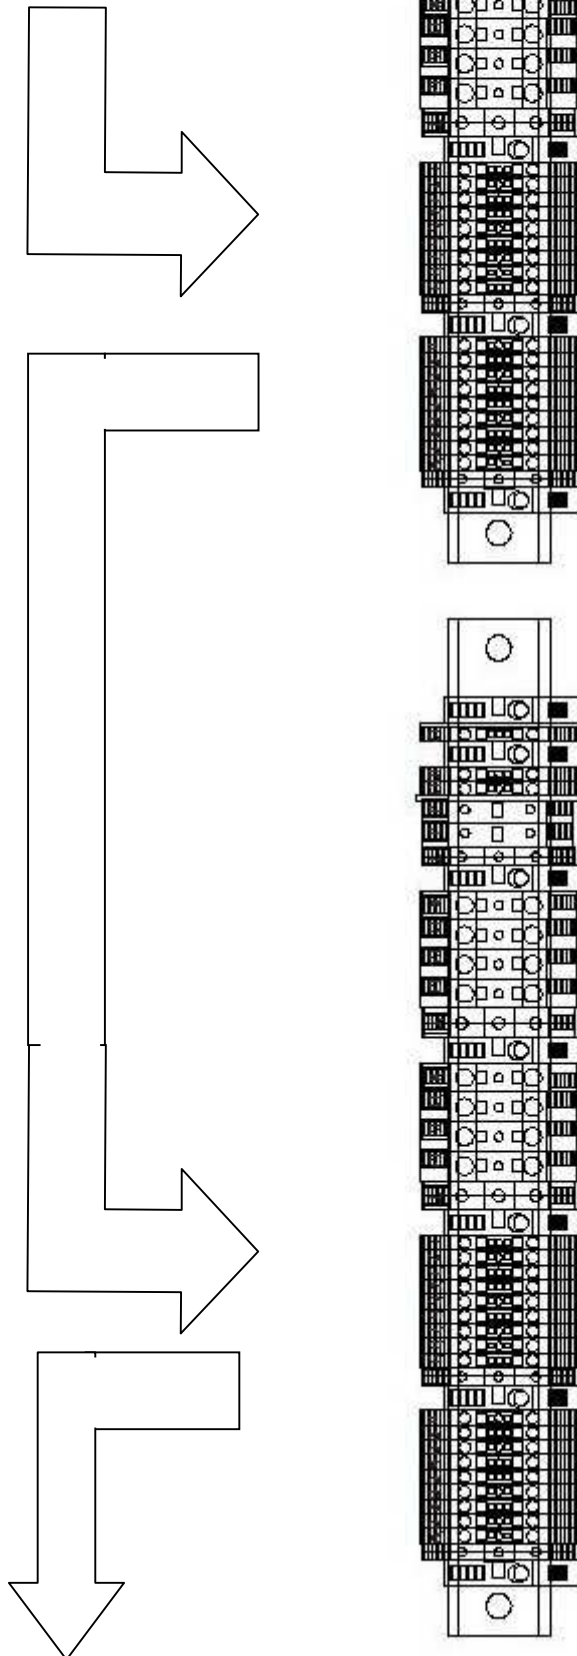


Special link for REILS

Box n° R1

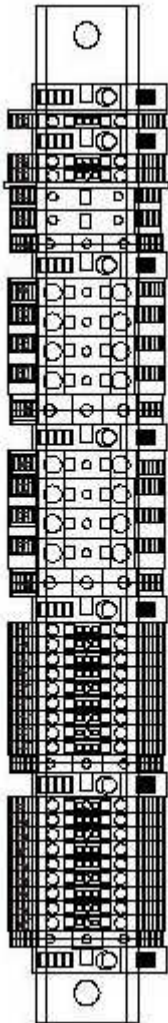

9

19

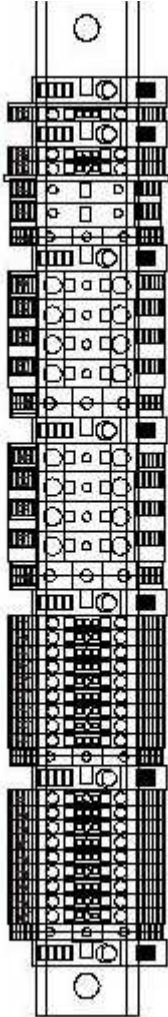

9

19

Box n° R2 (just follows R1)

