



JX 2300

Outer box connections manual

Release 1.0

This document is subject to modification without notice
Please, if necessary, ask for new release at : contact@flashelek.com

Wiring

Lamp connection

L2 : Power



L0 : Ground

L1 : Trigger

J : Safety switch

J : Safety switch





T : Earth

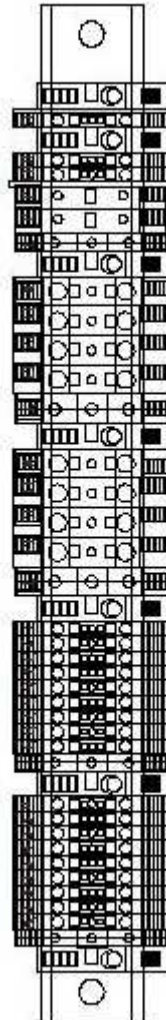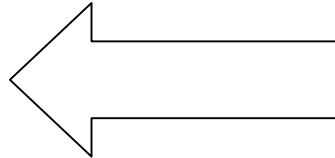


Mains

- N : Neutral
- L1 : Phase 1
- L2 : Phase 2
- L3 : Phase 3

T : Earth

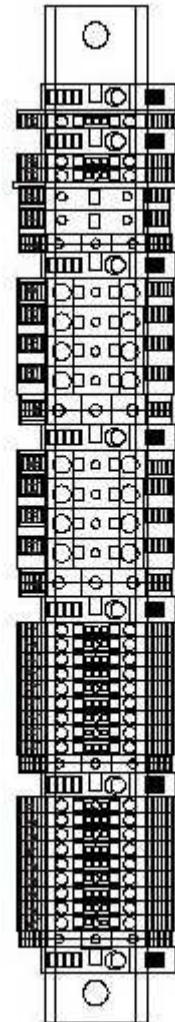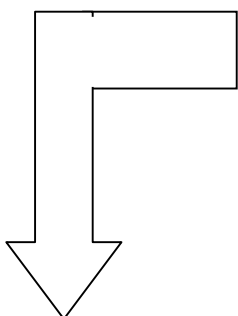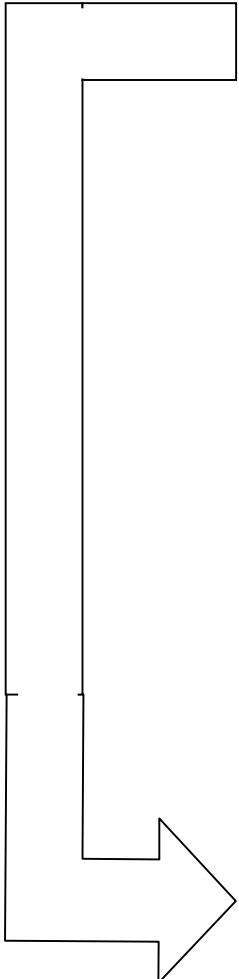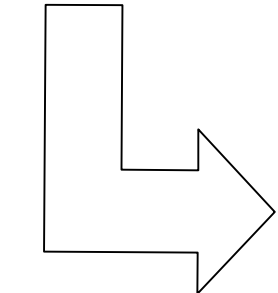

Box n°N

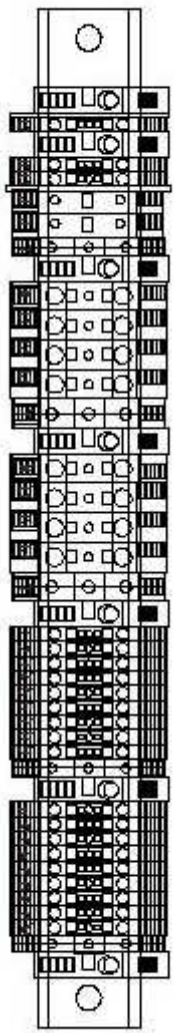

Box n°N + 1

JX 2300
Remote control connection

SFLS mode

- 1 : High intensity
- 2 : Brilliance ground
- 3 : Medium intensity





- 7 : Current loop – (optional)
- 8 : Current loop + (optional)

11, 12, 13, 14,
15, 17, 18
16 not connected

to

1, 2, 3, 4
5, 7, 8

6 not connected

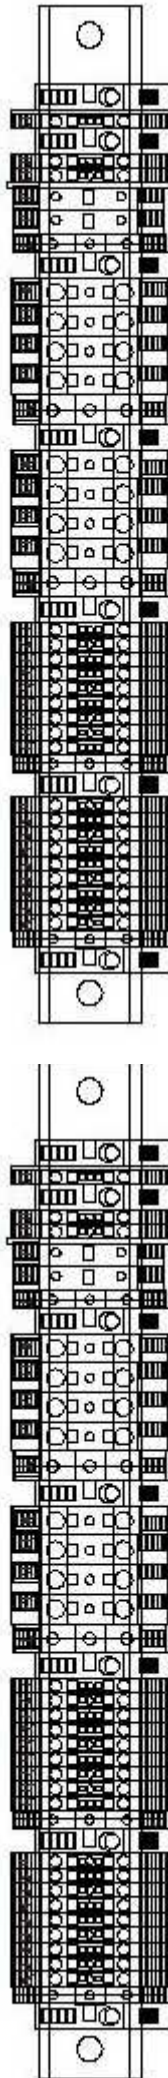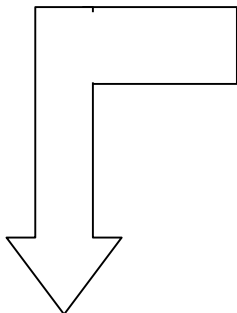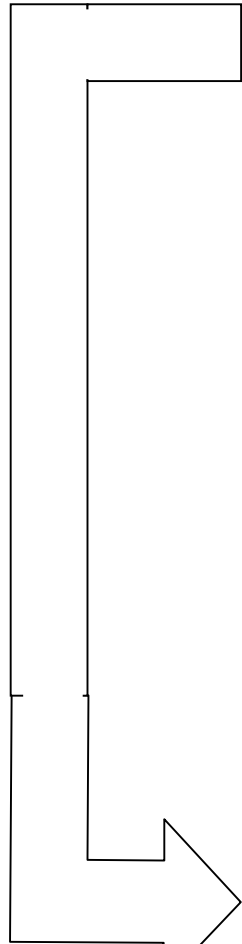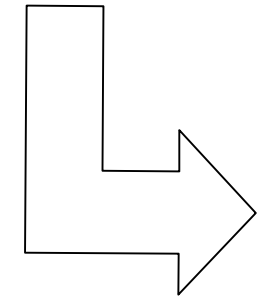

Box n°N

Box n°N + 1




- 1 : Hight intensity
- 2 : Brilliance ground
- 3 : medium intensity

7,8 : Switched on when alarm

11, 12, 13, 14,
15, 16, 17, 18

to

1, 2, 3, 4
5, 6, 7, 8

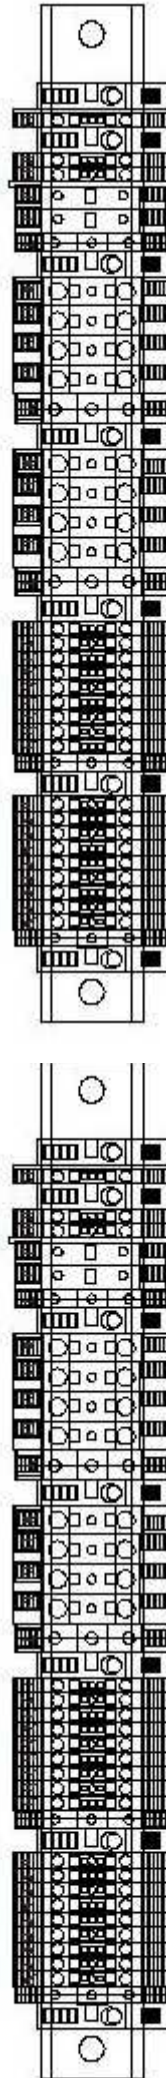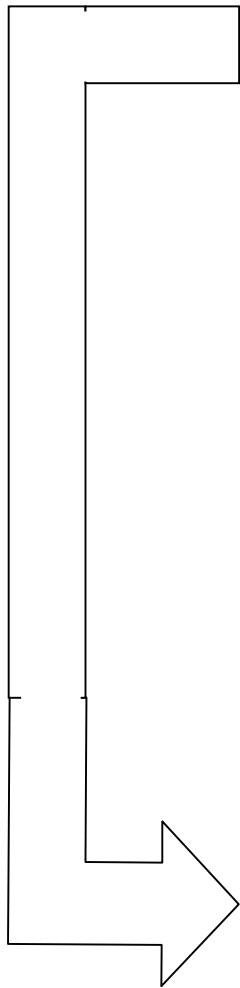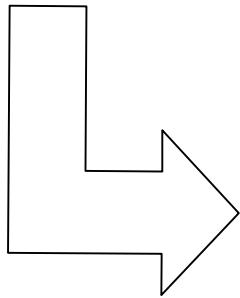

JX 2300
Remote control connection

REILS mode

Box n°R1

Box n°R2